

USB Driver Installation for KETTLER devices with USB connection 2000/XP/Vista/7 (32/64 bit)

1. Do **not** connect your device to the PC!
2. Double-Click on executions file CP210x_VCP_XP_S2K3_Vista_7.exe.
3. Accept the licence agreement and click on the button "Next".
4. Install or change install location.
Click on the button "Next".
5. Click on the button "Install".
6. Click on the button "Finish".
7. If you click "Change Install Location" button you can choose a different path.
If you click "Install" button" the default path will use.
8. Restart your PC.

1. Silicon Labs CP210x Virtual COM Port Drivers Windows XP/2K3 Server Windows Vista/7

2. Welcome to the InstallShield Wizard for Silicon Laboratories CP210x VCP Drivers for Windows XP/2003 Server/Vista/7 v6.1.00. The InstallShield Wizard will copy Silicon Laboratories CP210x VCP Drivers for Windows XP/2003 Server/Vista/7 v6.1.00 onto your computer. To continue, click Next.

3. License Agreement. Please read the following license agreement carefully. END-USER LICENSE AGREEMENT IMPORTANT: READ CAREFULLY BEFORE AGREEING TO TERMS. SILICON LABORATORIES INC., SILICON LABORATORIES INTERNATIONAL PTE. LTD., AND THEIR AFFILIATES (COLLECTIVELY, "SILICON LABS") HAVE DEVELOPED CERTAIN MATERIALS (E.G., DEVELOPMENT TOOLS, EXAMPLE CODE, EMBEDDABLE CODE, DLLs, SOFTWARE/COMPUTER PROGRAMS AND OTHER THIRD PARTY PROPRIETARY MATERIAL) ("LICENSED MATERIALS") THAT YOU MAY USE IN CONJUNCTION WITH SILICON LABS' MCU PRODUCTS. ANY USE OF THE LICENSED MATERIALS IS SUBJECT TO THIS END-USER LICENSE AGREEMENT. I accept the terms of the license agreement.

4. Choose Destination Location. Select folder where setup will install files. Setup will install Silicon Laboratories CP210x VCP Drivers for Windows XP/2003 Server/Vista/7 v6.1.00 in the following folder. To install to this folder, click Next. To install to a different folder, click Browse and select another folder. Destination Folder: c:\...\MCU\CP210x\Windows_XP_S2K3_Vista_7_2


5. Ready to Install the Program. The wizard is ready to begin installation. Click Install to begin the installation. If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.

6. InstallShield Wizard Complete. The InstallShield Wizard has successfully copied the Silicon Laboratories CP210x VCP Drivers for Windows XP/2003 Server/Vista/7 v6.1.00 to your hard drive. The driver installer listed below should be executed in order to install drivers or update an existing driver. Launch the CP210x VCP Driver Installer. Click Finish to complete the Silicon Laboratories CP210x VCP Drivers for Windows XP/2003 Server/Vista/7 v6.1.00 setup.

7. Silicon Laboratories Silicon Laboratories CP210x USB to UART Bridge. Installation Location: C:\Program Files (x86)\Silabs\MCU\CP210x\ Driver Version 6.1.

8. Installation completed successfully.

9. Switch on your KETTLER device.
10. Connect your PC/Notbook to your device.
After that the device manager shows the new entry:
Silicon Labs CP210x USB to UART Bridge

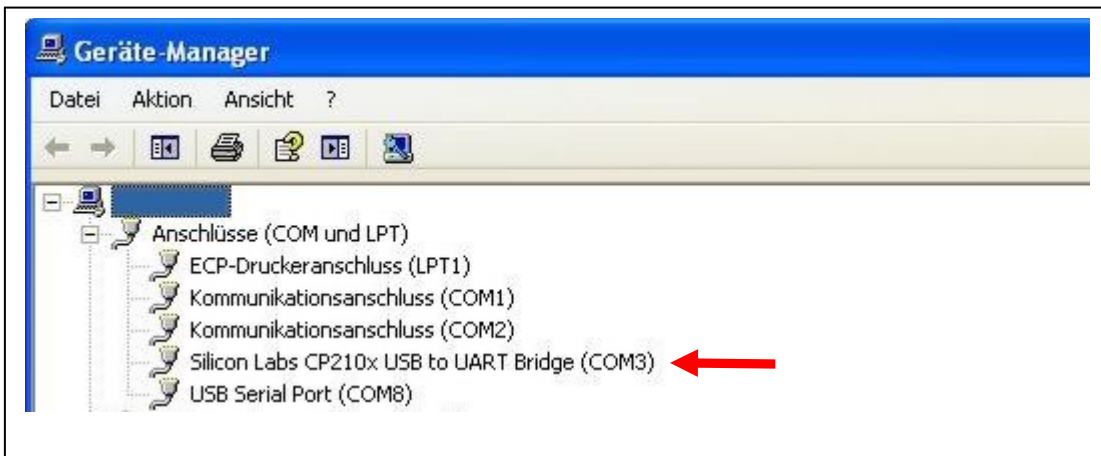

The drivers could be deleted with "Change or Remove Programs" under Settings > Control Panel > Add/Remove Programs.



Your KETTLER – Team